





1
Locate the baseleg rear lug and block into the bottom "H Slots" of the upright as shown.

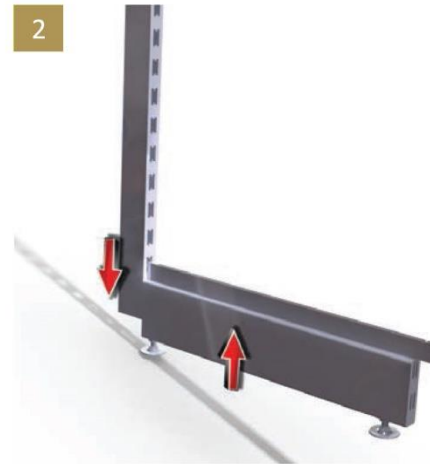

2
Using a rubber mallet, firmly knock the baseleg upwards locking it into position until flush.




3
Repeat steps 1 and 2 until you have two "L" shaped uprights.

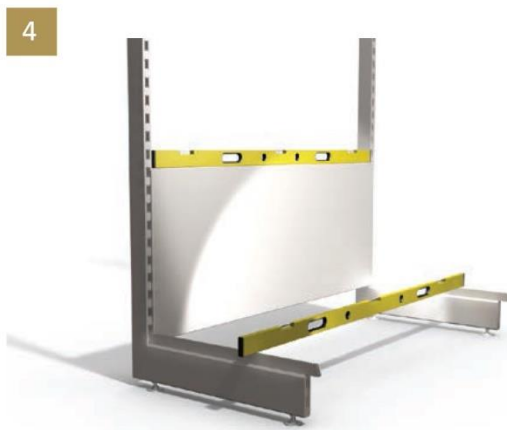

4
Connect both "L" shaped uprights together by fitting a back panel into the bottom "H" slots of the uprights. Now check levels are correct by adjusting the foot discs as required.



5
Fit the plinth skirting into position by slotting it between the front capping on the baselegs.

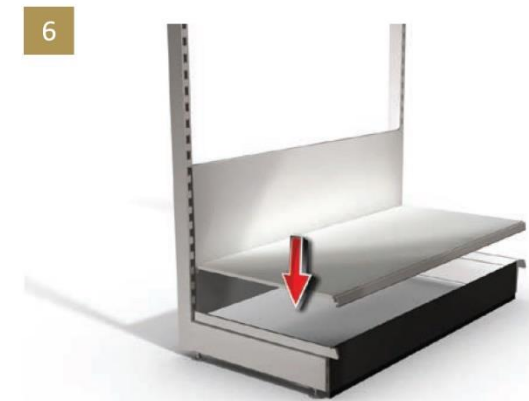

6
Fit the base shelf onto the baseleg runners. Now fit all remaining back panels.

7



Once the base shelf and back panels are in place the bay should look as above. You are now ready to fit the upper shelves.

8



Insert a bracket into the upright "H" slot at an angle as shown above.

9



Rotate the bracket upwards until secured in a horizontal position. Brackets can also be positioned at sloping angles if desired.

10



Repeat step 9 on the opposite upright and then fit a matching shelf onto the pair of brackets.

11



Repeat steps 8 - 10 until all the upper shelves are in position.

12



To finish, attach EPOS ticket strips to the front of all shelves.